Special Care and Handling

- Avoid rough handling such as bumping or dropping.
- Avoid extreme temperatures. For best results use between the temperatures of 39° F and 120° F (4° C and 38° C).
- Clean using only a slightly damp cloth. Do not use cleaners with chemical agents.
- To avoid damaging the unit, never place it near radiators, in front of heating vents, in direct sunlight, or near water.

Battery Information

- Your iBlaster Express uses one 9-volt battery, not included.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.
- Do not short circuit battery terminals.
- Remove batteries and store them in a cool, dry place when not in use.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.

Excalibur Electronics reserves the right to make technical changes without notice in the interest of progress.

LIMITED 90-DAY WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.,
13755 SW 119th Ave.,
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080, Fax: 305.477.9516
www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND
YOUR UNIT WITHOUT RECEIVING
AN ESTIMATE FOR SERVICING.
WE CANNOT STORE YOUR UNIT!

Congratulations on your purchase of the iBlaster Express from Excalibur Electronics, Inc. Your new portable audio system is designed to deliver maximum enjoyment. Please take a few moments to read this manual thoroughly.
It will explain the features and operation of your unit and help ensure a trouble-free installation.

DO NOT EXPOSE YOUR iBLASTER EXPRESS TO RAIN OR MOISTURE.

iPod® is a registered trademark of Apple Computer, Inc.

The legendary King Arthur brandished a magic sword, Excalibur, from which we take our company name. With this unique weapon in his hands, he could not be vanquished.

Although Excalibur Electronics can't claim the magical secrets of Merlin, King Arthur's court wizard, sometimes our patented technology may make it seem as if we could.
We make you think.

Layout of iBlaster Express

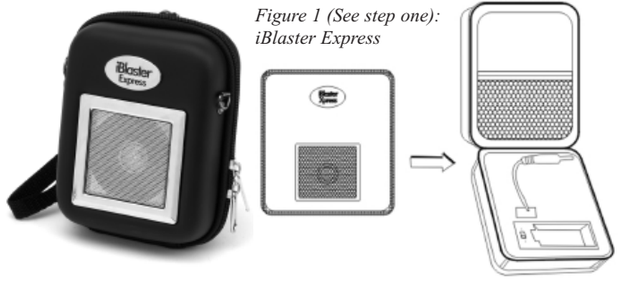

Figure 1 (See step one): iBlaster Express

How to Use Setting up the iBlaster Xpress

Step 1. Unpack the unit carefully. Read this instruction sheet completely. We recommend that you save the carton and packing materials to store the unit, in case you ever need to return it for service.

Figure 2 (See step two): Battery Cover

Step 2. Install batteries correctly. Close the battery cabinet.

Step 3. Position your iPod® correctly.

Step 4. Connect iPod® with 3.5 mm audio cable. Turn on the power for playback.

Figure 3 (See step two): Battery Compartment

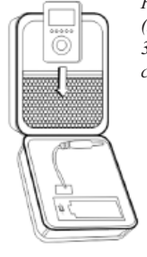

Figure 4 (See step four): 3.5 mm audio cable

Warning

- To reduce the risk of electric shock, do not expose this appliance to rain or moisture. Potentially dangerous high voltages are present inside the enclosure. Do not open cabinet. Refer servicing to qualified personnel only.
- For your safety, when disconnecting the DC power cord, pull the power plug. Do not pull the cord by itself. Never handle the DC power plug with wet hands, as this could cause fire or electric shock.
- Caution: If the plug or power supply cord needs to be replaced, please ensure that it complies with the manufacturer's recommendation.
- Do not attempt to repair the unit by yourself. This should be done only by a qualifed service technician.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. ***NOTE:*** *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable l interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- *Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*